# contigo®

# CARE AND USE INSTRUCTIONS

 


## ⚠ CAUTION:

- Product is NOT designed for hot liquids. Use only with cold liquids. DO NOT use with carbonated or pulpy beverages.
- Prior to drinking, make sure the AUTOPOP® lid is properly threaded to the body and screwed completely.
- Avoid accidental depressing of the AUTOPOP® button by keeping the button free and clear of other objects.
- DO NOT overfill. Fill liquid to the capacity line on the outside of the bottle or just below the threading on the bottle.
- DO NOT microwave or freeze.
- DO NOT use cleaners containing bleach, chlorine, abrasives, and/or harsh chemicals.
- DO NOT continue to use product if damaged.

#### USAGE RECOMMENDATIONS

- Use the bottle's lock feature to avoid unintended depressing of the AUTOPOP® button.
- The bottle is leak proof only when the spout is in the closed position.
- Twist lid to the right to secure in place.



### CLEANING INSTRUCTIONS

- a. Wash thoroughly before first use and allow all parts to dry completely.
- b. Do not remove silicone seal.
- c. Wash all lid pieces thoroughly, either in the top-rack of a dishwasher or by hand.
  - Lid (in open position) and body are top-rackdishwasher safe.
  - For hand washing, soak all pieces in warmsoapy water for 10 minutes.
  - Let all components dry completelybefore reassembly.
- d. ALWAYS STORE WITH LID REMOVED to allow parts to dry completely.

