

## AUTOSPOUT® Striker Kids' Bottle Care and Use Instructions

To view instructional cleaning video, visit http://bit.ly/contigostriker



 
## USE AND CARE INSTRUCTIONS

- Use mild dish soap to soak and wash.
- It's important to clean and dry bottle completely between reuses.
- · Do not store beverages overnight in bottle.
- Not for use with hot, carbonated, pulpy or perishable beverages.
- Not intended for children under 3 years of age.
- Not intended for the microwave or freezer.
- Avoid using cleaners containing bleach, chlorine, abrasives and/or other harsh chemicals.

Wash thoroughly before first use and immediately after each use. Always store bottle with lid and straw removed.

1 Disassemble lid

② Soak the lid in hot soapy water for ten minutes. Rinse & scrub straw, valve, and spout using a nylon cleaning pad & bristle brush to remove residue. Proceed to Step 3 to complete cleaning process.






## 3 Dishwash or soak & scrub

The straw, lid, and bottle body are TOP RACK dishwasher safe. When removing from the dishwasher, shake off any residual water from lid, straw, and bottle body to help all parts dry completely. Allow all parts to dry fully overnight before reassembly and resuse.

To wash by hand, rinse the lid with warm water. Scrub the bottle using a bristle brush to remove any residue. Rinse with warm water. Shake off any residual water from lid, straw, and bottle body to help all parts dry completely. Allow all parts to dry fully overnight before reassembly and reuse.

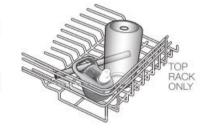



## STORAGE INSTRUCTIONS

- Always store with straw, lid, and body disassembled and separated to keep parts completely dry before reuse.
- Keep spout in open position to allow proper air flow and remain dry.

Reassemble lid prior to use. Push valve assembly into spout until it fits securely. Push straw holder into valve assembly, then reinsert top of the straw into the straw holder.

