

contigo®



Spill-Proof Tumbler Care and Use Instructions

⚠ CAUTION

- Not for use with hot, carbonated, pulpy or perishable beverages.
- Not intended for children under 3 years of age.
- DO NOT microwave or freeze.
- DO NOT use cleaners containing bleach, chlorine, abrasives and/or other harsh chemicals.
- DO NOT continue to use if damaged.
- DO NOT carry bottles containing liquid in bags to help prevent accidental opening.

CLEANING INSTRUCTIONS:


- Wash thoroughly before first use.
- RINSE IMMEDIATELY AFTER EACH USE with warm water.
 - Remove straw for best results.
- Lid, body and straw are TOP-RACK DISHWASHER SAFE or can be hand-washed.
 - When washing by hand, soak lid, body and straw for 10 minutes in hot soapy water.
 - Hand wash body, lid and straw with warm water in a mild detergent.
 - Rinse thoroughly.

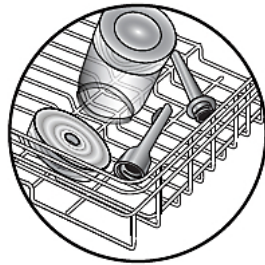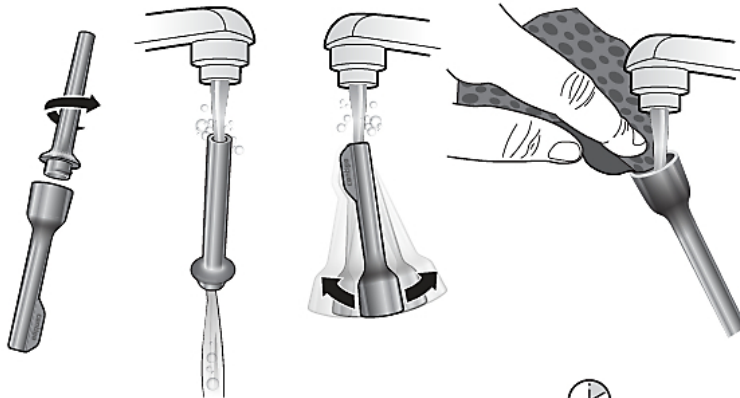

OR



- ALWAYS STORE PRODUCT WITH LID REMOVED AND STRAW UNTWISTED to open position to allow parts to dry completely.

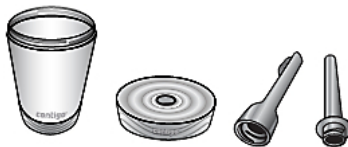

- Reassemble the lid prior to use.



For complete warranty information, see www.GoContigo.com.

www.GoContigo.com

©2017 Ignite USA. All Rights Reserved.
Should you have any questions about your purchase, please
contact us at 1-888-262-0622 or GoContigo.com.