

# Calphalon®



## PRECISION CONTROL COUNTERTOP OVEN

## USER MANUAL

WWW.CALPHALON.COM

MODEL: TSCLTRDG3





# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions, product labels and warnings before using the precision countertop oven.
2. This appliance generates heat during use. Do not touch hot surfaces. Use handles or knobs. Always protect your hands with non-slip oven mitts or similar.
3. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
4. This appliance is not to be used by children or by persons with reduced physical, sensory or mental capabilities.
5. Close supervision is necessary when any appliance is used near children. Children should not play with the appliance.
6. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning. To disconnect, turn any control to OFF, then unplug power cord from outlet. Do not disconnect by pulling on cord. Always grasp the plug and pull to disconnect.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Do not attempt to replace or splice a damaged cord. Return appliance to the manufacturer (see warranty) for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors or for commercial purposes.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near wet surfaces, or heat sources such as a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance or removing a pan, containing hot oil or other hot liquids. Always protect your hands with non-slip oven mitts or similar.
13. Do not use appliance for other than intended use. Misuse can cause injuries. Intended for household countertop use only. Keep 6 inches (152 mm) clear from the wall and on all sides. Always use appliance on a dry, stable, level surface.
14. Oversize foods or metal utensils must not be inserted in a countertop oven as they may create a fire or risk of electric shock.
15. A fire may occur if the countertop oven is covered, touching or near flammable materials, including curtains, draperies, towels, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
16. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
17. Extreme caution should be exercised when using containers constructed of materials other than metal or glass.
18. Do not store any materials, other than manufacturers recommended accessories, in this oven when not in use.
19. Do not place any of the following materials in the oven: paper, cardboard, plastic, or any materials that may catch fire or melt.
20. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
21. Empty the crumb tray after each use.
22. The glass door is made of tempered glass. Always inspect the glass door for chips, cracks or any other damage. Do not use the toaster oven if the glass door is damaged, as the glass may shatter during use.
23. Do not use with a programmer, timer, wireless plug adapter or outlet that allows control remotely, or connect to a circuit that is regularly switched on and off by the utility.



# SAVE THESE INSTRUCTIONS

## HOUSEHOLD USE ONLY



### POLARIZED PLUG

This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

### POWER CORD INSTRUCTIONS:

A short power-supply cord or detachable power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a long detachable power-supply cord or extension cord is used:

- The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
  - The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
  - If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.
- Do not pull, twist or otherwise abuse the power cord.

### NOTICES:

- Some countertop and table surfaces are not designed to withstand the prolonged heat generated by certain appliances. Do not set the heated unit on a finished wood table. We recommend placing a hot pad or trivet under your toaster oven to prevent possible damage to the surface.
- During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few uses.



# PRODUCT DIAGRAM

1. LCD Screen Display
2. Start, Turbo Convect, and Cancel/OFF Buttons
3. Function Selector Dial
4. Time/Temperature Control Dial
5. Time/Temperature Selector Button
6. Two Rack Positions
7. \*Baking Pan
8. \*Removable Wire Rack
9. \*Removable Crumb Tray

\*These parts can be replaced on [Calphalon.com](http://Calphalon.com) or at 1-800-809-7267

## PREPARING YOUR COUNTERTOP OVEN

- Remove all packaging before using the Countertop Oven.
- Clean Countertop Oven and accessories per cleaning instructions in this manual.
- Dry thoroughly.

**NOTE:** Do not immerse the cord, plug, or body of the unit in water.

- Select a location for the Countertop Oven. The location should be on a flat counter, in an open area, where the plug will reach the outlet.
- Plug the Countertop into the electrical outlet.





# USING YOUR COUNTERTOP OVEN

- Once the Countertop Oven is plugged in, the LCD screen will illuminate and the Start Button LED light will flash. Set Temperature will flash on the screen, with a default temperature displayed.
- First, turn the Function Selector Dial to one of the following 8 options: Bake, Broil, Roast, Reheat, Defrost, Pizza, Bagel and Toast.
- Then, use the Time/Temperature Control Dial to adjust cooking temperature or shade (for Toast and Bagel functions). Turn clockwise to increase and counter-clockwise to decrease.
- Press the START button to begin preheating. PREHEATING will flash on the LCD screen. Ensure the Oven door is closed for preheating. The Oven will beep and PREHEATING will disappear from the LCD screen once it is preheated. Oven does not preheat for BAGEL and TOAST functions. For these settings, food items may be placed inside the Oven immediately after pressing START.
- You may set the timer before the oven begins preheating, during preheating, or once preheating is complete. Press the Time/Temperature Selector Button to change Time/ Temperature Selector Dial to time selection. Turn dial clockwise to increase cooking time and counter-clockwise to decrease cooking time. The maximum time setting is 60 minutes.  
NOTE: Toast and bagel functions automatically set time based on shade selection.
- Once preheating is complete, and timer is set, put food into the Countertop Oven, using the Wire Rack or Baking Pan. When using the Baking Pan, always place on top of the Wire Rack. Never place food or accessories directly on the Quartz Heating elements.
- Once food is inside, close the door and press the START button again. The Timer will begin counting down.
- Press the Turbo Convect Button for better air circulation and crispier food.
- Once the allotted time has expired, the Countertop Oven will beep, and it will stop heating, but the display will remain lit for a period of time and then it will time out. You may press Cancel/ OFF to turn off the display before it times out.
- Press the Cancel/OFF Button to turn off the Countertop Oven.
- Use pot holders to carefully remove food from the Countertop Oven.
- The LCD screen light will turn off after 90 seconds of inactivity. Press any button to wake up the appliance.

**NOTE:** For further details on product features and usage instructions, please visit [www.calphalon.com](http://www.calphalon.com)



# CLEANING & MAINTENANCE

- Clean oven and any accessory used after each use.
- ALWAYS unplug the oven, and allow it to cool before cleaning.
- To clean exterior of oven, wipe with a damp cloth. DO NOT IMMERSE IN WATER. Make sure to only use mild, soapy water. Abrasive cleaners, scrubbing brushes and chemical cleaners will damage the coating on this unit.
- To clean Wire Rack or Baking Pan, remove from the Oven and immerse in warm, soapy water and wipe with soft cloth or sponge. These may also be washed in the top rack of the dishwasher. Dry thoroughly.
- Remove the Removable Crumb Tray and shake off crumbs. Wash with soapy water, and dry thoroughly. Cleaning the Crumb Tray often will avoid any accumulations.

## 1 YEAR WARRANTY

For additional information on your Calphalon Precision Control Countertop Oven and detailed warranty information, visit us at [www.calphalon.com](http://www.calphalon.com) or call us at 1-800-809-7267



P.N. 194915