

contigo®

Contigo® Fit Water Jug

64 fl. oz | 1.9 L

CARE AND USE INSTRUCTIONS


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

⚠ CAUTION

- Product is NOT designed for hot liquids. Use only with cold liquids.
- Not for use with carbonated or pulpy beverages.
- Always press the AUTOSPOUT® button with the bottle in an UPRIGHT position prior to tipping it to drink. This will release any built-up pressure. Release button to seal.
- Prior to drinking, make sure the lid is properly threaded to the body and screwed on completely.
- Avoid accidental depressing of the AUTOSPOUT® button by keeping the button free and clear of other objects.
- DO NOT overfill. Fill liquids to just below the threading in the body.
- DO NOT microwave or freeze.
- DO NOT use cleaners containing bleach, chlorine, abrasives, and/or other harsh chemicals.
- DO NOT continue to use product if damaged.
- DO NOT carry bottles containing liquid in bags to help prevent accidental opening.

USAGE RECOMMENDATION

1. Fill Contigo Sports Jug with beverage of your choice.
2. Screw lid on tightly to avoid any leaks or spills and to keep beverage cold up to 10 hours.
3. To ensure your jug will be leak proof, you must engage the button lock. To engage the button lock, push the slider located on the opposite side of the jug. If you can see RED on the slider, the jug is NOT locked and will NOT be leakproof.
4. When you're ready to drink, unlock the slider and push the button labeled AUTOSPOUT to open the drinking spout. The red portion of the slider will be visible when you have unlocked the spout.
5. Push down the spout shield for easy drinking access and to avoid water collection. When finished drinking, close the spout and push the slider so the red is no longer visible to avoid any spills or leaks.
6. Use the handy fence hook feature for team sports and hook the jug on a fence to avoid putting it on the ground!

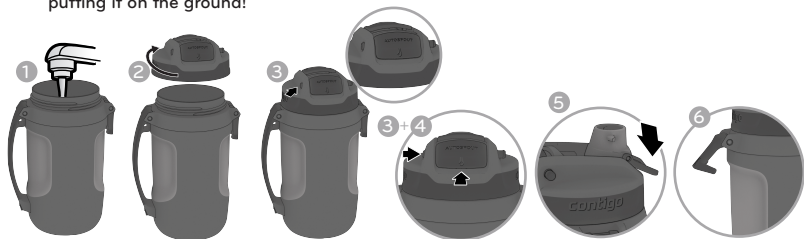

CLEANING INSTRUCTIONS

- Wash thoroughly before first use.
- RINSE LID IMMEDIATELY AFTER EACH USE with warm water, pressing the AUTOSPOUT® button so water flows through the drink spout.
- Hand wash recommended. Soak the lid for 10 minutes in hot, soapy tap water. Hand-wash body with warm water and a mild detergent. Rinse both the lid and body thoroughly before use.
- For best results, use a Contigo® bottle brush, www.GoContigo.com.



•ALWAYS STORE BOTTLE WITH LID REMOVED to allow parts to dry completely.

©2022 Contigo Brands
Product of: Contigo Brands
Chicago, IL 60601
www.GoContigo.com

We would love to hear from you.
1.888.262.0622



For complete warranty
information, see
GoContigo.com.