



INFLATABLE QUIKPAK™ KAYAKS

READ THE FOLLOWING INSTRUCTIONS AND WARNINGS TO AVOID DROWNING OR SERIOUS INJURY

WARNING!

Failure to follow these warnings could cause **SEVERE INJURY** or **DEATH**.

- **CONSULT WITH A PHYSICIAN** prior to beginning paddle sport training. Paddle sports can be very dangerous and physically demanding.
- **OBTAIN PADDLESPORT TRAINING** specific to this type of craft. Do not exceed your padding ability - be honest with yourself. Obtain certified first aid training and carry first aid and safety/rescue equipment.
- **WEAR U.S COAST GUARD APPROVED LIFE JACKETS**, and where appropriate, wear a helmet.
- **NOT A LIFE SAVING DEVICE.**
- **NEVER PADDLE ALONE.**
- **CHECK WEATHER FORECAST BEFORE DEPARTING DOCK** and heed all weather advisories.
 - **DRESS APPROPRIATELY** for the weather conditions, as cold water and/or cold weather can cause hypothermia.
 - **DO NOT PADDLE IN FLOOD CONDITIONS.**
- **BE AWARE OF THE WATER CONDITIONS**, including appropriate water levels, tidal changes, dangerous currents and other water hazards. Do not use in high wind, strong currents, open water or dangerous tides. Always scout unfamiliar waters, and portage where appropriate.
- **NEVER PADDLE WHILE UNDER THE INFLUENCE** of drugs or alcohol.
- **KEEP PROPER LOOKOUT AND SAFE DISTANCE** from other vessels and hazards at all times.
- **OBEY APPLICABLE BOATING LAWS.** Know and follow local water safety rules and boating regulations.
- **READ THE OWNER'S MANUAL** and follow the manufacturer's recommendations for the use this product. It is the owner's responsibility to carefully read the manual and instruct all users in safe operation of this product. Consult the manufacturer's information prior to adding aftermarket equipment.
- **DO NOT OVERLOAD OR OVERINFLATE.** Adults should inflate the chambers in numbered sequence.



sevylor INFLATABLE QUIKPAK™ KAYAKS

IMPORTANT INFORMATION

The warnings below relate to various situations. Please observe them.

⚠ CAUTION!

Denotes an imminent hazard which will result in severe injury if you do not comply with the instructions.

⚠ WARNING!

Reminds you of safety measures which must be observed. Also denotes unsafe practices which could result in personal injury or damage to the product or property, if you do not comply with the instructions.

⚠ CAUTION!

It is the owner's responsibility to make sure all users carefully read and follow the instructions for safe operation of this product. Observe all local and national laws. Always wear a Personal Flotation Device approved by the proper authorities. Please carefully observe the Capacity Plate information which is printed on the product.

⚠ WARNING!

These products are not meant for towing because the extreme pressure of the water while towing can tear the eyelets and/or handles.

These products are made of the highest quality materials and comply with NMMA (National Marine Manufacturers Association) regulations.

⚠ CAUTION!

Altering the construction of these products could jeopardize the safety of the occupants and will void the limited warranty.

**IF FOUND - CONTACT
SI SE ENCUENTRA - COMUNICARSE CON
EN CAS DE DÉCOUVERTE - CONTACTEZ**

Name/Nombre/Nom: _____

Phone/Teléfono/Téléphone: _____

Phone/Teléfono/Téléphone: _____

Please complete the “if found label” located on the boat with the boat owners contact information in large print with a permanent marker.

INFLATION INSTRUCTIONS


To inflate using any Sevylor® Pump:

⚠ CAUTION!


Do not over inflate. Pressurize product to “Inflation Pressure” stated in the chart for your specific product.

⚠ WARNING!


Never use a compressor, CO₂ or compressed air to inflate the product. Do not let your product come into contact with sharp, pointed objects.

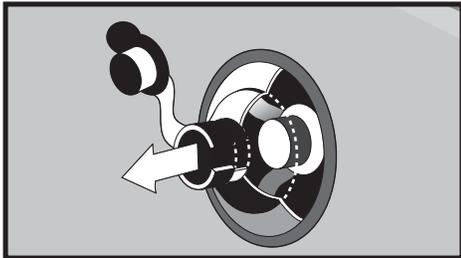


1. To begin inflation, open external cap and pull firmly on the lanyard to extend out. This will open internal yellow seal.

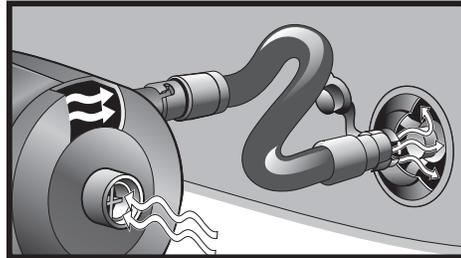

2. Attach nozzle of hose to inflation end of pump. Insert adapter nozzle into valve and start pumping.

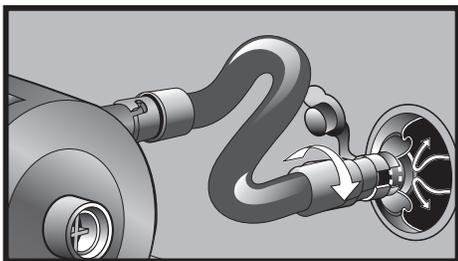

3. When fully inflated, seal valve by pushing in with adapter nozzle. This will seal the internal yellow stopper and keep air from escaping while closing cap. Gently twist adapter while backing hose out of valve.

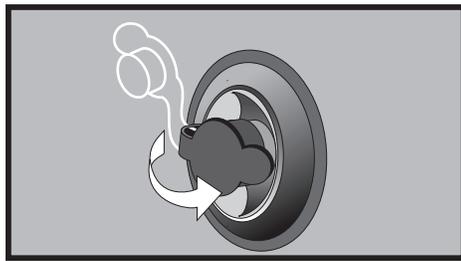

4. Fully remove pump and hose and close external cap. Valve should appear depressed into itself.

IMPORTANT! Inflate the product chambers in the following order:

K5 QuikPak™ Kayak

1. Inflate the floor chamber.
2. Inflate the DIN chamber.
3. Inflate the outside main chamber.

K1 QuikPak™ Kayak

1. Inflate the two foot wells chambers.
2. Inflate the inner main chamber.
3. Inflate the outer main chamber.
4. Inflate seat back.

The chambers on the product will also be numbered to indicate order of inflation. This order of inflation will ensure the proper volume and buoyancy of the safety chamber.


Note: To inflate the mini Double Lock™ valve, which is used on some of the Sevylor product floors and seat bottoms, follow the same inflation instructions above, using the mini Double Lock™ valve adapter. The mini Double Lock™ valve adapter is included with all Sevylor® pumps. The adapter can be purchased from Customer Service by calling 1-800-835-3278 US | 1-800-387-6161 CA (Part Number 5010000707).

⚠ CAUTION!

Water temperature and weather do affect the pressure in inflatable products. In cold weather your product will lose some pressure due to the fact the air will contract. If this occurs, you may want to add a little air to improve your product's performance. However, in hot weather, the air will expand. You must let some air out to prevent your product from failing due to overpressure. You should avoid exposing your product to extreme temperatures (hot or cold).


DEFLATION INSTRUCTIONS

Deflation instructions using any Sevylor® Pump:

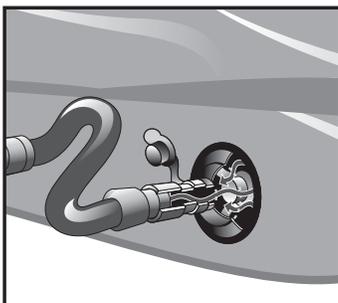


Remove nozzle of hose from inflation end and attach to opposite deflation end of pump. Repeat same steps as inflation. This will draw the air out quickly.


K5 QuikPak™ Kayak Set Up Instructions

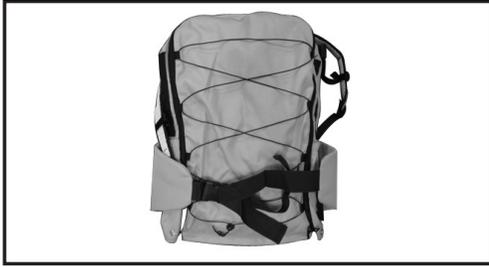

1. Remove QuikPak™ kayak from box.

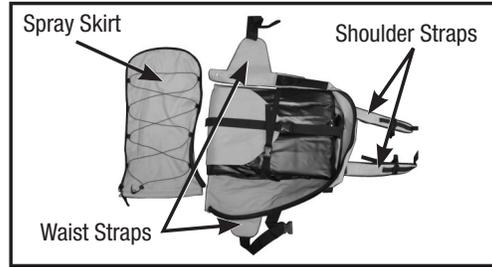


2. Unbuckle waist strap and shoulder straps. Unzip or remove spray skirt.

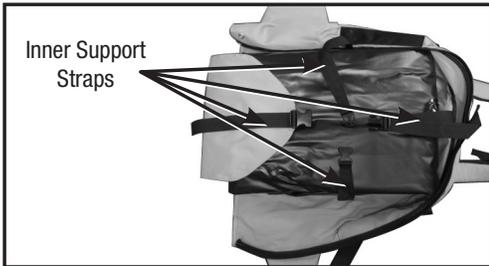

3. Unbuckle inner support straps.



4. Remove kayak from QuikPak™ unit and set kayak aside.

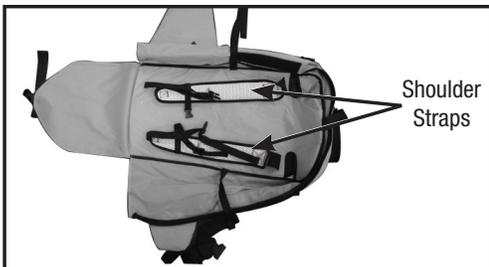

5. Pull shoulder straps through openings in QuikPak™ unit.



6. Fold bottom flap and inner support straps into the QuikPak™ unit.



7. Fold over side flaps and secure with the hook & loop strips.




8. Turn seat over and set aside.

Inflate Kayak (using order shown below)




9. Inflate outer chamber to 0.9 PSI.

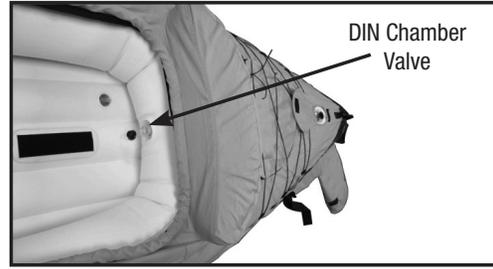


10. Inflate DIN chamber to 0.9 PSI.




11. Inflate floor chamber to 0.9 PSI.

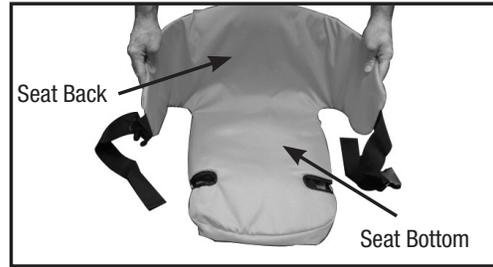


12. Take seat that was set aside in step 8, fold with hook-and-loop strips downwards as shown.

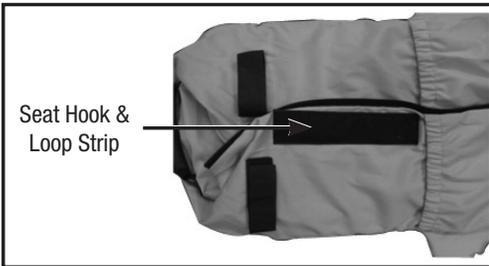


13. Line up hook & loop strip on seat bottom with the hook & loop strip on the kayak floor.

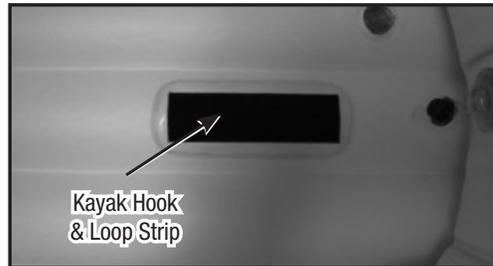


14. Place seat in kayak with the hook & loop strips secured as shown in step 13.

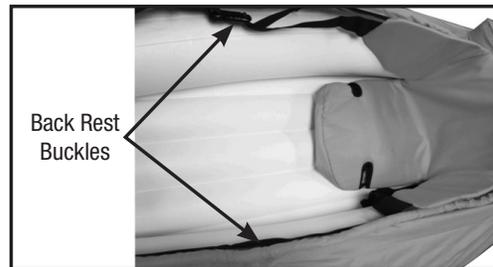

15. Attach back rest buckles on seat to the buckles on the kayak.

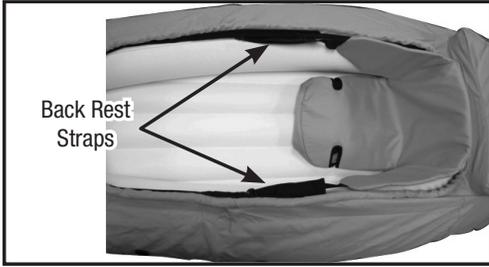


16. Adjust backrest straps to desired tension.

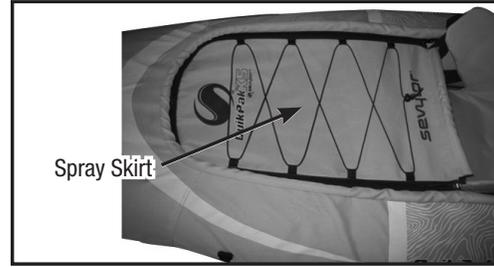

17. Zip spray skirt onto kayak.

Your QuikPak™ Kayak is now ready for use.

K5 QuikPak™ Kayak Breakdown/Storage Instructions

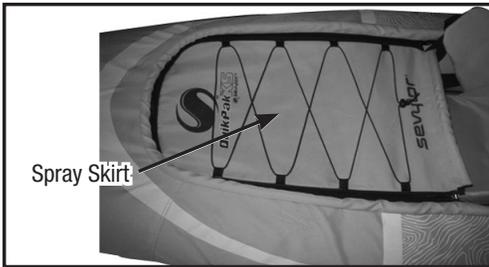


1. Remove kayak seat.
2. Remove spray skirt and deflate kayak.




3. Unfold side flaps, bottom flap & inner support straps.



4. Pull shoulder straps through the openings.

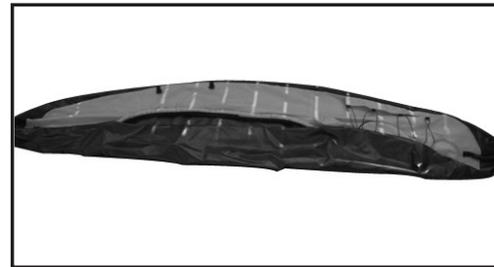

5. Fold kayak using the following steps.
 - 5a. Fold kayak lengthwise to center as shown in the above image.

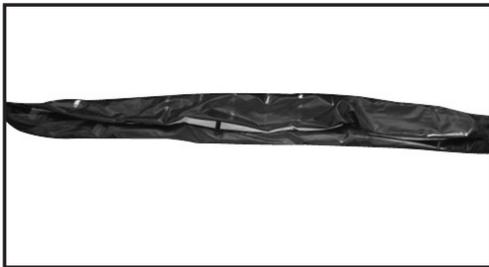

- 5b. Fold kayak lengthwise again as shown in the above image.



- 5c. Fold over ends of kayak as shown in the above image.




5d. Fold over ends of kayak again as shown in the above image.



5e. Fold kayak in half, with strake up, as shown in above image.




6. Place folded kayak into QuikPak™ unit.

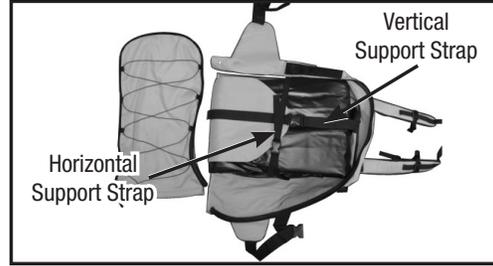

7. Buckle & tighten horizontal support strap. Buckle & tighten vertical support strap.



8. Attach spray skirt to QuikPak™ unit.

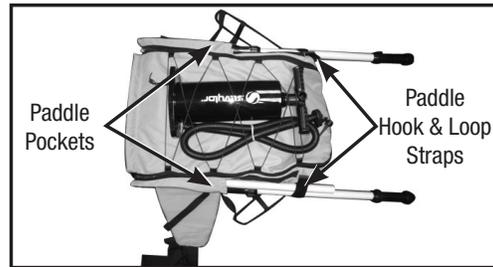


9. Store pump in cargo net on rear of QuikPak™ unit. Store paddle in side pockets and use hook & loop straps to secure the top of the paddle shafts.

Your QuikPak™ kayak is now ready to transport or store.

K1 QuikPak™ Kayak Set Up Instructions




1. Remove QuikPak™ Kayak from box.

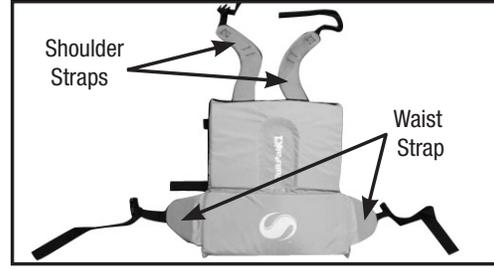

2. Unbuckle shoulder straps & waist strap.



3. Turn QuikPak™ unit over and unbuckle the support strap.

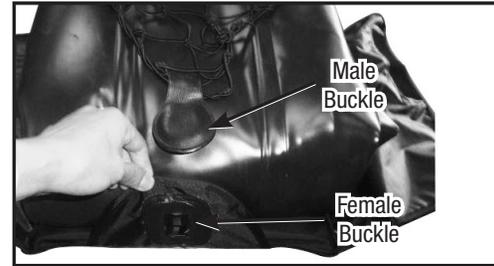

4. Pull the male buckles on cargo net out from each female buckle.



5. Remove cargo net and set aside.



6. Remove kayak and set aside. Fold shoulder straps into QuikPak™ unit as shown above.



7. Fold over left side flap of QuikPak™ unit, as shown above.

NOTE: Left side must be folded over first so the hook & loop strips can be attached.



8. Fold over right side flap of QuikPak™ unit, attaching the hook & loop strips to secure the QuikPak™ unit side flaps.



9. Buckle & tighten the support strap and set aside.


Inflate Kayak (using order shown below)




10. Inflate kayak using the following steps.
10a. Inflate foot wells to 0.5 PSI.



10b. Inflate inner chamber to 0.5 PSI.

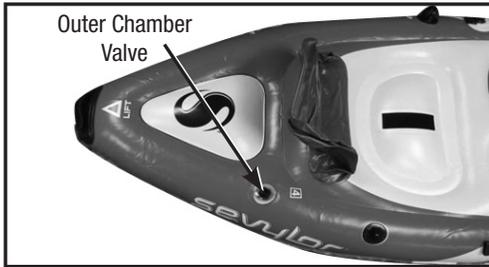

10c. Inflate outer chamber to 0.5 PSI.

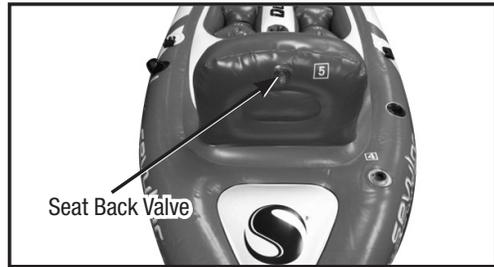

10d. Inflate seat back to 0.5 PSI.




11. With male buckles facing downward, place cargo net onto kayak in the position as shown above.




12. Insert each male buckle into the slots on kayak.




13. The cargo net installed onto kayak.

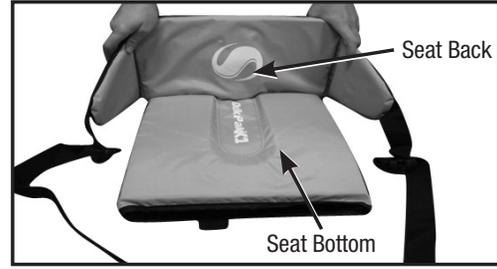

14. Kayak seat.

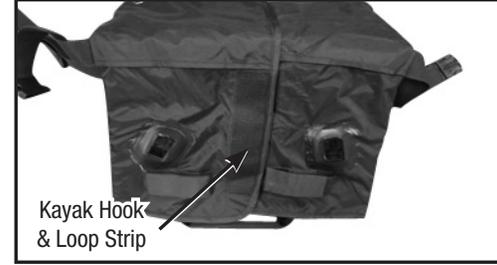


15. Align hook & loop strip on kayak with the hook & loop strip on the bottom of the seat.

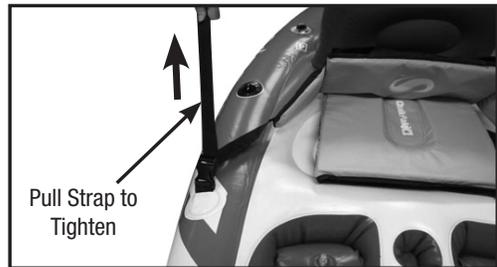

16. Connect the seat back strap buckles to the buckles on the kayak.


17. Adjust seat back straps to your desired tension.

K1 QuikPak™ Kayak Breakdown/Storage Instructions

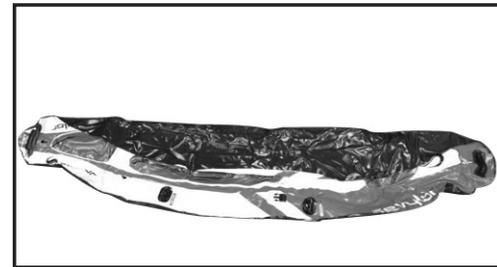

1. Remove kayak seat, remove cargo net & deflate kayak.
2. Unfold kayak seat in reverse order (QuikPak™ unit should look as shown above).

3. Fold kayak using the following steps.
 - 3a. Fold kayak lengthwise to center as shown above.

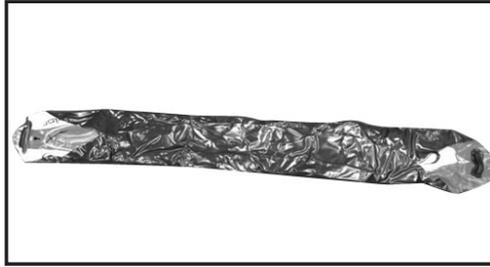


3b. Fold kayak lengthwise again, as shown above.



3c. Fold over end of kayak, as shown above.



3d. Fold over other end of kayak, as shown above.

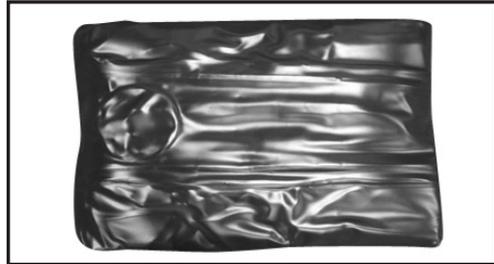

3e. Fold kayak in half, as shown above.




4. Place kayak into QuikPak™ unit.



5. Fold up left & right side flaps, buckle & tighten support strap.



6. Install cargo net, as shown above (Refer to step 4 of K1 setup instructions for assistance).

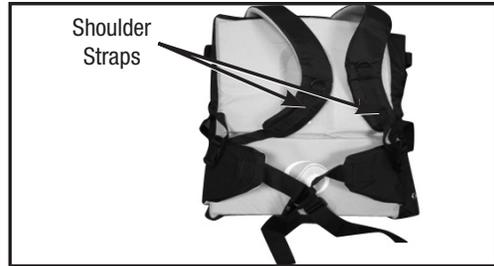

7. Buckle shoulder straps.



8. Store pump in cargo net on rear of QuikPak™ unit. Store paddle in side pockets and use hook & loop straps to secure the top of the paddle shafts.

Your QuikPak™ kayak is now ready to transport or store.

Your product is NMMA certified using the ABYC standard.



⚠ WARNING!

Do not exceed the certified maximum capacities under any circumstances!

| NMMA (ABYC Standard) | Persons Capacity | Maximum Payload Capacity | Inflation Pressure | Inflation Pressure |
|----------------------|---------------------|--------------------------|--------------------|--------------------|
| Model # | Persons Only | Persons, Gear | Main Chamber(s) | Floor Chamber(s) |
| K5 QuikPak™ Kayak | 1 Pers. or 250 lbs. | 250 lbs. | 0.9 PSI | 0.9 PSI |
| K1 QuikPak™ Kayak | 1 Pers. or 400 lbs. | 400 lbs. | 0.5 PSI | 0.5 PSI |

OPERATING INSTRUCTIONS:

- Follow all local boating regulations and navigation rules. Familiarize yourself with boating conditions where you plan to use the boat. Use common sense and caution when operating in unfamiliar places.
- Observe the maximum weight the product can carry and do not overload past this limit. Over-loading jeopardizes the safety of the occupants.
- Be sure all accessories and/or equipment (e.g. oars, life jackets) are in proper working condition before using the boat. Each person occupying the boat is to wear an approved Personal Flotation Device (life preserver).
- Sharp objects are not to be carried in the product without adequate protection or storage.
- When navigating the product in any water depth, watch for submerged or sharp objects that may damage or pierce the boat's air chambers.
- Enter the product from the port (left) or starboard (right) sides - not from the fore (front) or aft (back) sides.
- Never tow with a boat or any other vehicle.

MOTOR MOUNTING

⚠ CAUTION!

Do not mount a motor on any of these kayaks.

CARE & STORAGE:

- You product is made of the highest quality materials and comply with NMMA (National Marine Manufacturers Association) regulations. Altering the construction of these products will void the limited warranty and could jeopardize the safety of the occupants.
- If your product has been used in salt water, rinse it off with fresh water as soon as possible.
- Remove tar spots or other soiled areas by using a mild soap and rinsing with fresh water.
- Be sure your product is completely dry before storing.
- The products may be stored inflated, but do not place any heavy or sharp objects on it. Storage is best in a dry room.

REPAIRING SMALL PUNCTURES


For inadvertent punctures, you can repair them with the included Sevylor® repair patch.

INSTRUCTIONS:

1. Thoroughly clean and dry the damaged area. Completely deflate if an inflatable article.
2. Cut a portion of the patch to cover the puncture, and allow an additional ¼" on all sides. Always cut a round or oval patch. Never leave corners.
3. Be sure the spot is completely dry.
4. Peel the backing from the patch.
5. Adhere the patch to the puncture.
6. Using your thumb or finger apply even pressure across the entire surface of the patch.

PADDLE ASSEMBLY: SELECT MODELS ONLY.

Join the three shafts together by screwing them together with the two couplers. Attach the blade to the shafts by screwing onto the end of the shaft.

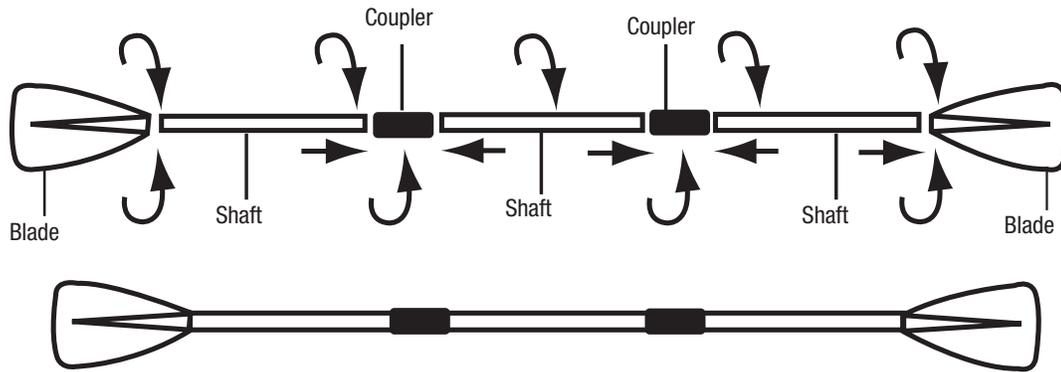

GUIDELINES FOR USAGE:

These kayaks may be wider than a typical kayak, which means they may feel more stable. However, as with any narrow, flat bottom kayak, users must be aware of the possibility of the kayak tipping and compensate for it. Paddle with short, even and easy strokes. Paddle close to the kayak with the paddle almost vertical. Pull with one hand and push with the other. If the nose of the kayak is moving right to left you are probably paddling too hard. Ease off on the force of your stroke to reduce the swaying of the front end. Paddling backward or breaking can sometimes offer quick maneuverability.

Limited One Year Warranty

The Coleman Company, Inc. ("Coleman") warrants that for a period of one (1) year from the date of original retail purchase, this product will be free from defects in material and workmanship. Coleman, at its option, will repair or replace, free of charge, this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component at no cost to the consumer. If the product is no longer available, replacement may be made with a similar product of equal or greater value. No warranty is provided for batteries and light bulbs. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Coleman dealers, service centers, or retail stores selling Coleman® products do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

What This Warranty Does Not Cover

This warranty does not cover normal wear of parts, parts that are not genuine Coleman® parts, or damage resulting from any of the following: negligent use or misuse of the product; use on improper voltage or current; commercial use of the product; use contrary to the operating instructions; disassembly, repair or alteration by anyone other than Coleman or an authorized service center. Coleman expressly excludes from this warranty and denies liability for defects or damage caused by repair or alteration by anyone other than Coleman. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. Warranty void if damage to the product results from the use of a part other than a genuine Coleman® part.

No terms of this warranty may be construed to apply to non-warranty service and maintenance. Accordingly, Coleman also denies liability for defects and damage caused by the use of unauthorized parts, repair, service or alteration outside the terms of this warranty.

COLEMAN SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITIONS. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THE ABOVE WARRANTY OR CONDITIONS. SOME STATES, PROVINCES, OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

How to Obtain Warranty Service

Your product must be under warranty in order to obtain warranty service. If your product is defective and is within your warranty period, contact us at 1-800-835-3278 (TDD 1-316-832-8707) in order to receive a return authorization. Do not return product to Coleman without authorization. You will be directed to attach a tag to the product that includes your name, address, daytime telephone number and description of the problem. Include a copy of the original sales receipt. **Carefully package the product and send insured by UPS, FedEx Ground or Parcel Post with shipping and insurance prepaid to:**

For products purchased in the United States:

The Coleman Company, Inc.
3600 North Hydraulic
Wichita, KS 67219 U.S.A.

For products purchased in Canada:

Newell Brands Canada ULC
20B Hereford Street
Brampton, ON L6Y 0M1

The cost of transporting the product to Coleman for warranty service is the responsibility of the purchaser.

DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE. DO NOT SHIP WITH THE BATTERIES INSTALLED.

If you have any questions regarding this warranty please call 1-800-835-3278 or TDD 1-316-832-8707 in the United States or 1-800-387-6161 in Canada.

© 2023 The Coleman Company, Inc. All rights reserved.

Double Lock™ and QuikPak™ are trademarks of The Coleman Company, Inc.

Sevylor® and  are registered trademarks of The Coleman Company, Inc.



3600 North Hydraulic • Wichita, KS 67219 U.S.A.
1-800-835-3278 US | 1-800-387-6161 CA

4010025816 (ECN0069301-C)